


CAMMENGA EASYMAG

MODEL EM3-556

OPERATING INSTRUCTIONS

The CAMMENGA EASYMAG, Model EM3-556, slides open for easy loading, unloading, and cleaning. It can also be loaded from the top like a standard magazine using "stripper clips" or loose ammo.


The EASYMAG has 5 parts:

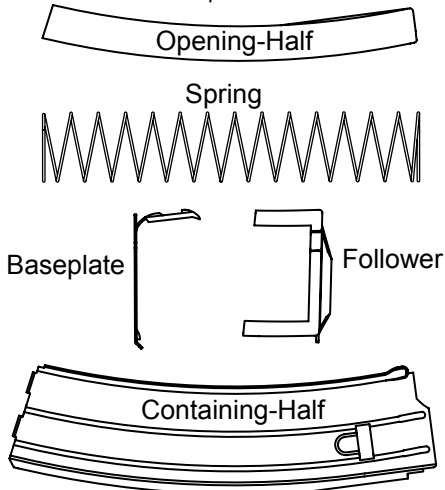

To open the EASYMAG, pull the Opening-Half down with enough force to release it from the closed position. Pull the Opening-Half back until the Follower locks onto the Baseplate. The magazine is now ready to be loaded, unloaded, or cleaned.

When loading ammunition, **hold the EASYMAG vertically and stack the ammo on the right and left side.**

To close the EASYMAG slide the Opening-Half to the closed position. The Follower will automatically release from the Baseplate and the Opening-Half will lock into the closed position.

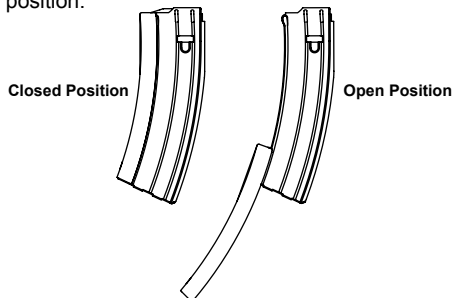

CLEANING AND DISASSEMBLY

To clean the EASYMAG simply slide the Opening-Half to the fully open and locked position and wipe out both halves of the magazine case. Disassembly is not necessary.

To completely disassemble the EASYMAG, the Baseplate must be removed. The unique shape of the EASYMAG Baseplate requires the Spring to be pulled away from the Baseplate before it can be removed.

1. Slide the Opening-Half approximately two-thirds back, stopping before the Follower locks onto the Baseplate.
2. Insert a rod through the hole in the front of the Opening-Half and through the Spring.
3. Slide the Opening-Half into the closed position. This will pull the Spring away from the Baseplate.
4. Lift / pry the back of the Baseplate away from the magazine until the two catch points are outside the Containing-Half.
5. Slide the Baseplate out of the magazine.
6. Carefully pull the Opening-Half back and remove the Spring.
7. Slide the Opening-Half off the bottom of the Containing-Half
8. Slide the Follower out of the bottom of the Opening-Half.

HELPFUL TIPS

The EASYMAG initially requires extra force to release the Opening-Half from the closed position. This extra tension prevents the Opening-Half from sliding down when the EASYMAG is being used in the rifle. A firm grip on both halves of the EASYMAG is recommended when opening.

To quickly and efficiently load an EASYMAG hold it as vertically as possible. When loading the EASYMAG, set the rounds in the left or right side only, do not allow the back of a round to center itself into the back rib. If a round accidentally stacks into the back rib a quick shake will usually set the round correctly on the right or left side.

For more information visit www.cammenga.com